

GRAVOGRAPH



GRAVOTECH GROUP



LS900 EDGE

DUAL SOURCE LASER SOLUTION



VERSATILE

This two-in-one machine has a Fibre laser source and a CO2 laser source to cut or engrave every material.



ERGONOMIC

LS900 EDGE is made to ease your work. It is compatible with all the accessories range!




PRODUCTIVE

Increase your productivity! Exceed your abilities while paying for one single machine.

Deal with any material with the LS900 EDGE! Its Fibre laser source allows stunning results on complex plastics. Its CO2 laser source is especially effective in engraving and cutting organic materials. Start easily one or the other source with the integrated software Gravostyle, through a color code on your file. Automatically switch from one source to the other during the quick engraving process.
Engraving area: 610x610mm. Adapted for piece production, small and medium-length job runs.



Cylindrical attachment (compatible with our full range of machines)

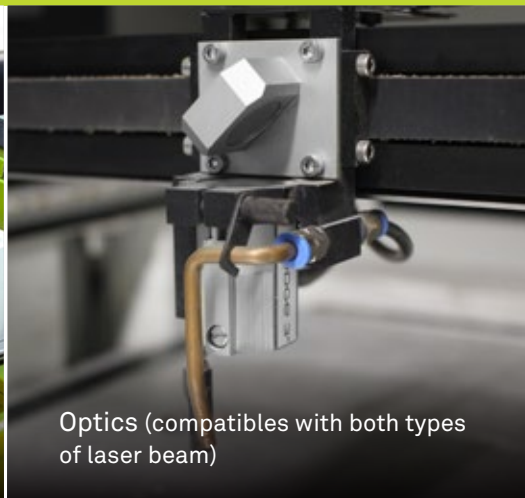


Optics (compatibles with both types of laser beam)



Dual-source mode management through the integrated software



Large engraving area for mass production

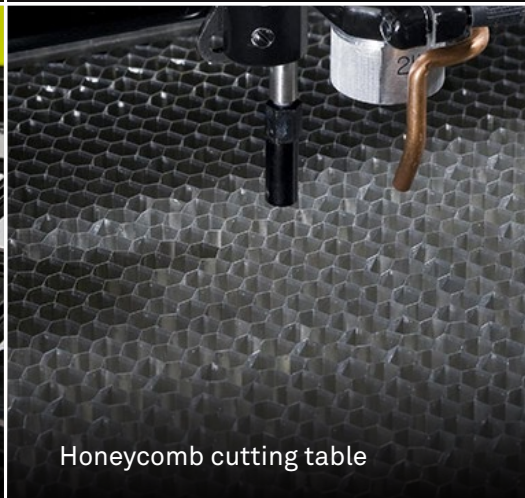

Honeycomb cutting table



Exhaust systems

TECHNICAL SPECIFICATIONS

Marking area (mm)	610x610
Z-axis travel (mm)	250
Fibre source output (W)	20 - 30 - 50
CO2 source output (W)	40
Included software	Gravostyle Graphic

PHYSICAL SPECIFICATIONS

Weight (kg)	170
Dimensions (mm)	945 x 1080 x 810
Options	<ul style="list-style-type: none"> - Positioning camera - Cutting tables - Cylindrical attachment - Exhaust systems
Safety	Class 1

TEL : +44 01926 884 433
 info@gravograph.co.uk
 www.gravograph.co.uk

Gravograph Ltd
 Unit 3, Trojan Business Centre
 Tachbrook Park Drive - Leamington Spa
 CV34 6RS - UNITED-KINGDOM

GRAVOGRAPH 

GRAVOTECH GROUP

